

КОМ300А Оптоволоконный медиаконвертер

Руководство по эксплуатации КОМ300А.001



ИЗДАТЕЛЬ
KYLAND Technology Co., Ltd.

Официальный дистрибьютор в России и
СНГ ООО «ТМС»
Адрес: Россия, 117519 г. Москва,
Варшавское шоссе, дом 133

Тел: +7 (495) 723-81-21
Факс: +7 (495) 723-81-22
E-mail: support@kyland.ru
Сайт: www.kyland.ru

Версия: V1.0.2022

Запрещается полное или частичное копирование данной документации, ее рецензирование в любой форме, без письменного соглашения с ООО «ТМС»

Disclaimer: Kyland Technology Co., Ltd. tries to keep the content of this manual as accurate and as updated as possible. This document is not guaranteed to be error-free, and we reserve the right to amend it without notice to users.

All rights reserved.

No part of this documentation may be excerpted, reproduced, translated, annotated or duplicated, in any form or by any means without the prior written permission of Kyland Corporation.

Copyright © 2022 Kyland Technology Co., Ltd.

Notice for Safety Operation

The product performs reliably as long as it is used according to the guidance. Artificial damage or destruction of the device should be avoided. Before using the device, read this notice carefully for personal and equipment safety. Please keep the manual for further reference. If the device used not according to the specified way by Kyland, the protection provided by the device maybe diminished. And Kyland is not liable to any personal or equipment damage caused by violation of this notice.

- Ensure the area where the device is used is clean and dry. Keep the ambient relative humidity within the range from 5% to 95% (non-condensing). Be suitable for indoor use.
- Do not place the device in an environment with high magnetic field, strong shock, or high temperature. Keep the working and storage temperatures within the allowed range.
- Install and place the device securely and firmly.
- Please keep the device clean; if necessary, wipe it with a soft cotton cloth.
- Do not place any irrelevant materials on the device or cables. Ensure adequate heat dissipation and tidy cable layout without being entangled or knotted.
- Wear antistatic gloves or take other protective measures when operating the device.
- Avoid any exposed metal wires because they may be oxidized or electrified.
- Install the device in accordance with related national and local regulations.
- Before power-on, make sure the power supply is within the allowed range of the device. High voltage may damage the device.
- Power connectors and other connectors should be firmly interconnected.
- Do not plug in or out the power supply with wet hands. When the device is powered on, do not touch the device or any parts with wet hands.
- Before operating a device connected to a power cable, remove all jewelry (such as rings, bracelets, watches, and necklaces) or any other metal objects, because they may cause electric shock, burns, or welding.
- Do not operate the device or connect or disconnect cables during an electrical storm.
- Use compatible connectors and cables. If you are not sure, contact our sales or technical

support personnel for confirmation.

- Do not disassemble the device by yourself. When an anomaly occurs, contact our sales or technical support personnel.
- If any part is lost, contact our sales or technical support personnel to purchase a replacement. Do not purchase parts from other channels.
- Dispose of the device in accordance with relevant national provisions, preventing environmental pollution.

In the following cases, please immediately shut down your power supply and contact your Kyland representative:

- Water gets into the equipment.
- Equipment damage or shell damage.
- Equipment operation or performance has abnormally changed.
- The equipment emits odor, smoke or abnormal noise.

Note: The security of any system merged with this device is the responsibility of the assembler. The following information applies when operating this device in hazardous locations:

Suitable for use in Class I, Division 2, Groups A, B, C and D Hazardous Locations, or nonhazardous locations only.

Cet appareillage est utilisable dans les emplacements de Classe I, Division 2, Groupes A, B, C et D, ou dans les emplacements non dangereux seulement.

WARNING: EXPLOSION HAZARD

- Do not disconnect equipment while the circuit is live or unless the area is known to be free of ignitable concentrations.
- Substitution of any component may impair suitability for Class I, Division 2.

AVERTISSEMENT: RISQUE D'EXPLOSION

- Avant de deconnecter l'equipement, couper le courant ou s'assurer que l'emplacement est designe non dangereux.
- La substitution de composants peut rendre ce materiel inacceptable pour les emplacements de Classe I, Division 2.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

NOTE: This product must not be used in residential areas. This product may cause interference if used in residential areas. Such use must be avoided unless the user takes special measures to reduce electromagnetic emissions to prevent interference to the reception of radio and television broadcasts.

Contents

1 Product Overview.....	1
2 Structure and Interface.....	2
2.1 Front Panel.....	2
2.2 Top Panel.....	3
3 Mounting.....	4
3.1 Dimension Drawing.....	4
3.2 Mounting Modes and Steps.....	4
4 Cable Connection.....	6
4.1 10/100Base-T(X) Ethernet Port.....	6
4.2 100Base-X SFP port.....	7
4.3 Grounding.....	9
4.4 Power Terminal Block.....	9
5 LEDs.....	12
6 Basic Features and Specifications.....	13

1 Product Overview

KOM300A is a green low-power DIN-RAIL industrial optical fiber converter developed by Kyland for wind power, distribution network automation, subway PIS, power SCADA, wastewater treatment, metallurgy, intelligent transportation, rail transit and other industries. KOM300A meets IP40 protection class. The RJ45 port of has surge protection common mode 4KV, differential mode 2KV capability, and the data line differential pair and adjacent differential also have this protection capability.

KOM300A supports DIN rail mounting and panel mounting.

Table 1 KOM300A Models

Models	KOM300A-Ports-Connector-PS1-PS2
Code definition	Code option
Ports :	1SFP2T
	Note: 1S2T: one 100Base-X SFP port, two 10/100Base-T(X) ports.
PS1-PS2: power input	LV (24VAC/DC (18-30VAC, 50/60Hz ; 12-48VDC) ,edundant power input)



Note :

We reserve the right to amend the product information listed in this table without notice. To obtain the latest information, you can contact our sales or technical support personnel.

2 Structure and Interface

2.1 Front Panel

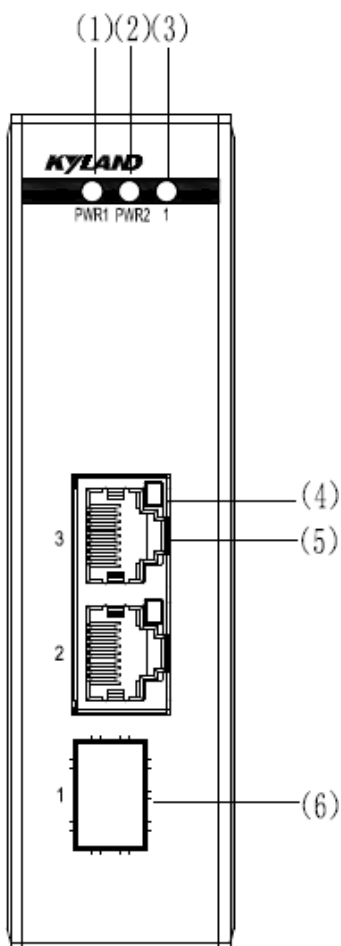


Figure 1 Front Panel

Table 2 Description of Front Panel

- (1) Power 1 LED
- (2) Power 2 LED
- (3) 100Base-X SFP interface indicator
- (4) 10/100Base-T(X) Ethernet Port connection status LED (green)
- (5) 10/100Base-T(X) Ethernet Port
- (6) 100Base-X SFP slot

2.2 Top Panel

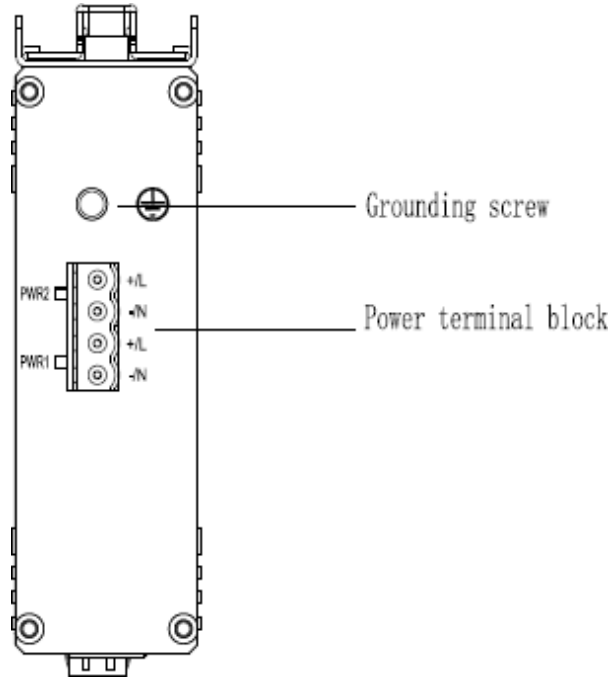


Figure 2 Top Panel

3 Mounting

3.1 Dimension Drawing

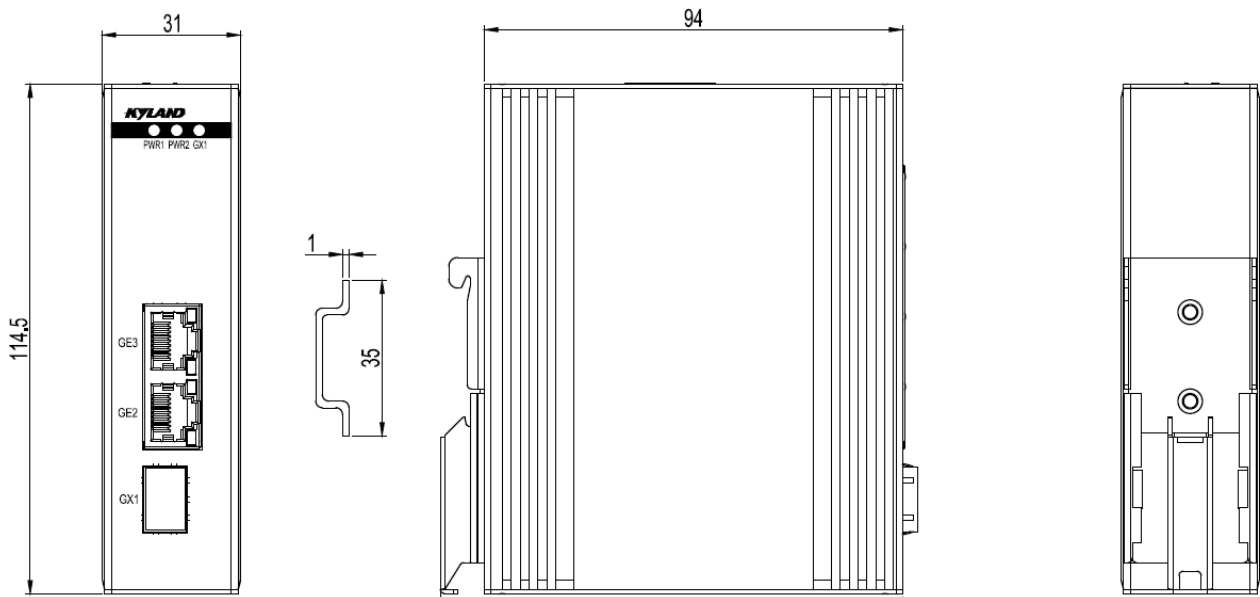


Figure 3 KOM300A Dimensions for DIN-Rail Mounting (unit: mm)

3.2 Mounting Modes and Steps

- DIN-Rail Mounting

Step 1: Select the mounting position for the device and guarantee adequate space and heat dissipation.

Step 2: Insert the connecting seat onto the top of the DIN rail, and push the bottom of the device inward and upward to ensure the DIN rail fits in the connecting seat. Make sure the device is firmly installed on the DIN rail, as shown in the following figure.

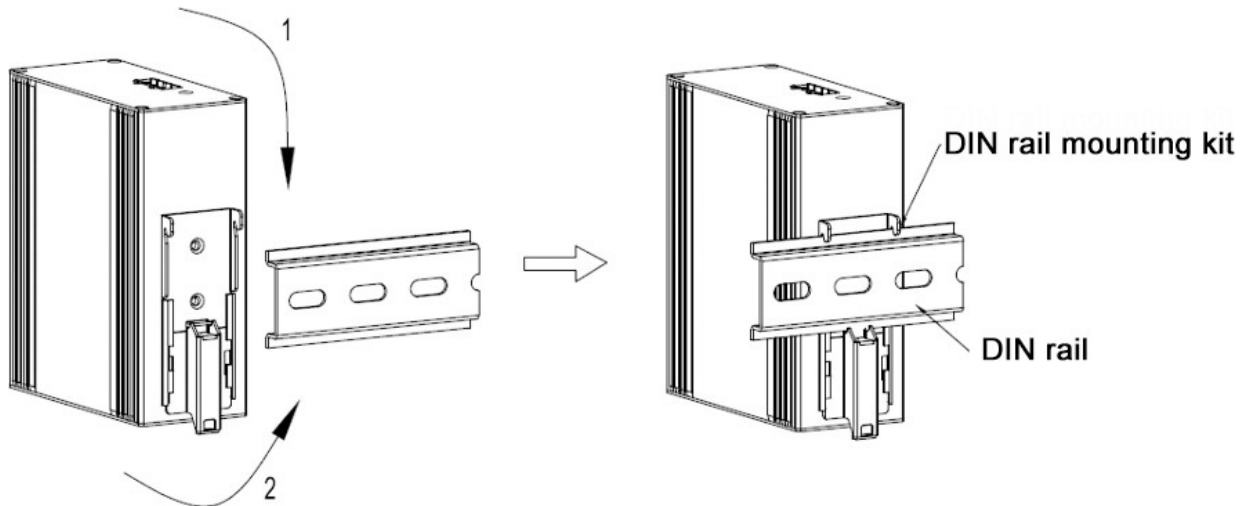


Figure 4 DIN Rail Mounting

- **DIN Rail Dismounting**

Detailed steps are as follows:

Step 1: As shown in the following figure, press the device downward and move the device in direction 1 until the bottom of the device is detached from the DIN rail.

Step 2: Pull the device upward and move the device in direction 2 until the device is removed from the DIN rail completely.

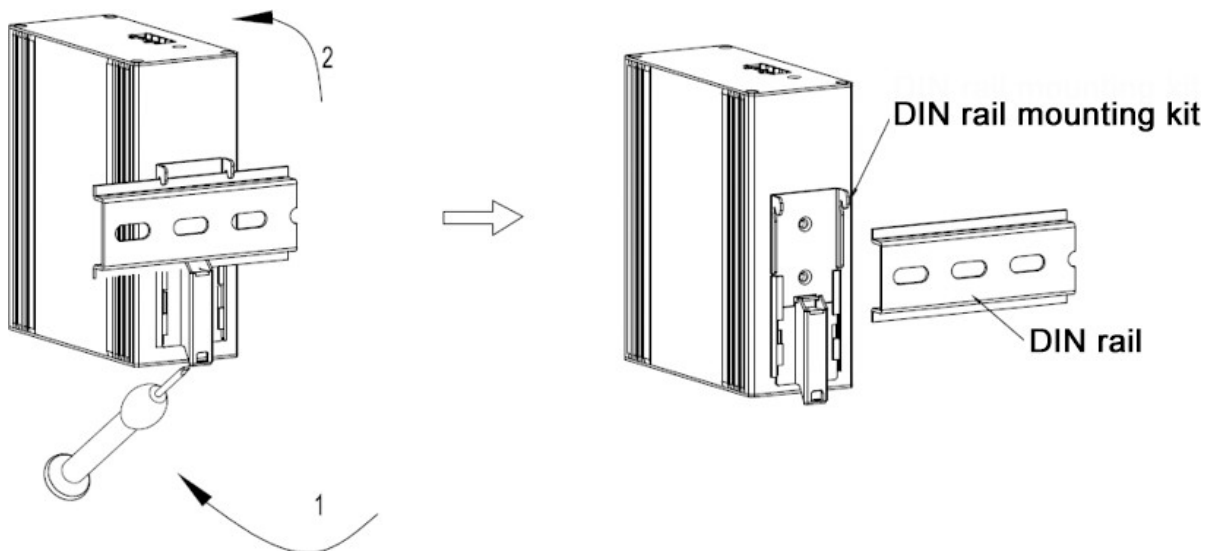


Figure 5 DIN Rail Dismounting

4 Cable Connection

4.1 10/100Base-T(X) Ethernet Port

10/100Base-T(X) Ethernet port is equipped with RJ45 connector. The port is self-adaptive. It can automatically configure itself to work in 10M or 100M state, full or half duplex mode. The port can also adapt to MDI or MDI-X connection automatically. You can connect the port to a terminal or network device with a straight-through or cross-over cable.

- Pins of the 10/100Base-T(X) RJ45 port

Figure 6 shows the pin numbers of the 10/100Base-T(X) RJ45 port.

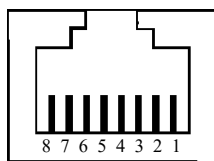


Figure 6 RJ45 Port

Table 3 lists the pin definitions of the 10/100Base-T(X) RJ45 port.

Table 3 Pin Definitions of 10/100Base-T(X) RJ45 Port

Pin	MDI-X Signal	MDI Signal
1	Receive Data+ (RD+)	Transmit Data+ (TD+)
2	Receive Data- (RD-)	Transmit Data- (TD-)
3	Transmit Data+ (TD+)	Receive Data+ (RD+)
6	Transmit Data- (TD-)	Receive Data- (RD-)
4, 5, 7, 8	Unused	Unused



Note:

"+" and "-" indicate level polarities.

- Wiring Sequence

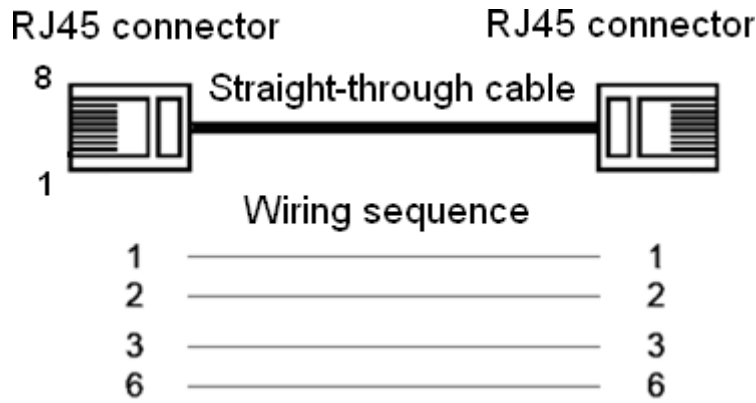


Figure 7 Connection Using Straight-through Cable

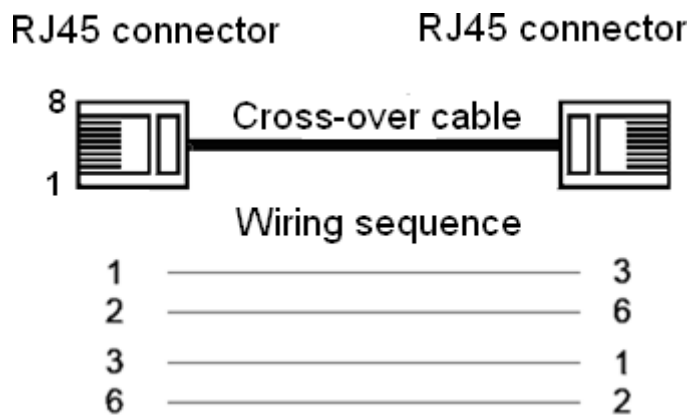


Figure 8 Connection Using Cross-over Cable



Note:

The color of the cable for RJ45 connector meets the 568B standard: 1-orange and white, 2-orange, 3-green and white, 4-blue, 5-blue and white, 6-green, 7-brown and white, and 8-brown.

4.2 100Base-X SFP port

100Base-X SFP slot (100Base-X SFP slot): You can enable data transmission only after inserting an SFP optical module into the slot and connecting cable properly. The following table lists the SFP optical modules (optional) supported by the series switches.

Table 4 100Base-X SFP Optical Modules

Model	Interface	MM/ SM	Connect or	Center Wavelength (CWL)	Transmission Distance
IFSFP-M-LX-LC-1310-2	100Base-X SFP port	MM	LC	1310nm	2km
IFSFP-S-LX-LC-1310-20	100Base-X SFP port	SM	LC	1310nm	10km

- 100Base-X SFP Optical Module

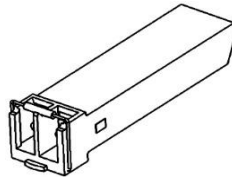


Figure 9 100Base-X SFP Optical Module

An SFP optical module is equipped with LC connector, and each port consists of a TX (transmit) port and an RX (receive) port. To enable communication between Device A and Device B, connect the TX port of Device A to the RX port of Device B, and the RX port of Device A to the TX port of Device B, as shown in the following figure.

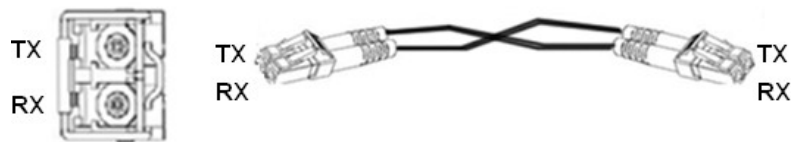


Figure 10 Fiber Connection of an SFP Optical Module

- Connect the SFP Optical Module

Insert the SFP optical module into the SFP slot in the switch, and then insert the fibers into the TX port and RX port of the SFP module.

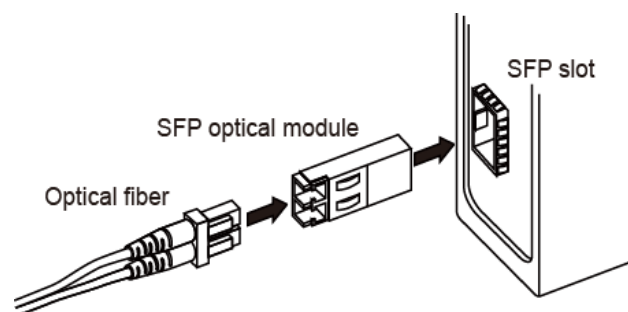


Figure 11 Connecting the SFP Optical Module

Identify the RX port and TX port of an SFP optical module:

1. Insert the two connectors in one end of two fibers into the SFP module, and those in the other end into the peer module.
2. View the corresponding connection status LED:

If the LED is on, the connection is correct. If the LED is off, the link is not connected.

This may be caused by incorrect connection of the TX and RX ports. In this case, swap the

two connectors at one end of the fibers.



Caution:

- The device uses laser to transmit signals in fibers. The laser meets the requirements of level 1 laser products. Routine operation is not harmful to your eyes, but do not look directly at the fiber port when the device is powered on.
- If the defined transmission distance of an SFP module is longer than 60km, do not use a short fiber (<20km) for connection. If such a short fiber is used, the module will be burned.

4.3 Grounding

Grounding protects the device from lightning and interference. Therefore, you must ground the device properly. You need to ground the device before it is powered on and disconnect the grounding cable after the device is powered off.

There is a grounding screw (see Figure 2) on the top panel of the switch. The screw is for chassis grounding. After crimping one end of the grounding cable to a cold pressed terminal, secure the end of the grounding cable to the grounding screw and firmly connect the other end to ground.



Note :

Cross-sectional area of the chassis grounding cable >2.5mm²; Grounding resistance <5Ω.

4.4 Power Terminal Block

There is a power terminal block on the top panel of the device. You need to connect the power wires to the terminal block to provide power for the device. The switch supports redundant power supply with 4-pin 5.08mm-spacing plug-in terminal block. When one power input is faulty, the switch can continue operating properly, thereby improving network reliability



Note :

- Others: Suitable cable with temperature of 85.5°C at least must be used for the power input terminal.

- 4-Pin 5.08mm-Spacing Plug-in Terminal Block

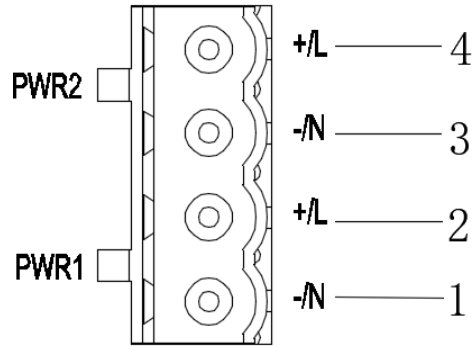


Figure 12 4-Pin 5.08mm-Spacing Plug-in Terminal Block (socket)

Table 5 Pin Definitions of 4-Pin 5.08mm-Spacing Plug-in Terminal Block

Pin Number	DC Wiring Definition	AC Wiring Definition
1	PWR1: -	PWR1: N
2	PWR1: +	PWR1: L
3	PWR2: -	PWR2: N
4	PWR2: +	PWR2: L

● **Wiring and Mounting**

Step 1: Ground the device properly according to section 4.3.

Step 2: Remove the power terminal block from the device.

Step 3: Insert the power wires into the power terminal block according to Table 5 and secure the wires.

Step 4: Insert the terminal block with the connected wires into the terminal block socket on the device.

Step 5: Connect one end of the power cable to an external power supply system (with the allowed power range). If the power LED on the front panel of the switch turns on, the power supply is connected properly.

Wiring and mounting should meet following specifications.

Table 6 Wiring and Mounting Specifications

Terminal Type	Required Torque	Wire Range (AWG)
Terminal Block Plug	4.5-5.0 lb-in	12-24

**Caution :**


- Provision shall be made to prevent the rated voltage from being exceeded by transient disturbances of more than 140% of the rated voltage.
 - Power adapter provide by end customer shall be non-sparking.
 - Before connecting the device to power supply, make sure that the power input meets the power requirement. If connected to an incorrect power input, the device may be damaged.
 - To comply with UL restrictions, this equipment must be powered from a source compliant with SELV.
-

**Warning :**

- Do not touch any exposed conducting wire, terminal, or component with a voltage warning sign, because it may cause personal injury.
 - Do not remove any part or plug in or out any connector when the device is powered on.
-

5 LEDs

Table 7 LEDs

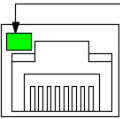LED	State	Description
PWR1/ PWR2 LED	On	The power is connected and operates properly
	Off	The power is not connected or operates abnormally
	Off	No Ethernet connection failures and no power failure alarms
 <p>Connection status (green)</p>		
10/100Base-T(X) Ethernet port connection status LED (green)	On	Effective port connection
	Blinking	Ongoing network activities
	Off	No effective port connection

6 Basic Features and Specifications

Power Supply		
Power Identifier	Rated Voltage Range	Maximum Voltage Range
LV	24VAC/DC(18-30VAC/12-48VDC)	18-30VAC/9-60VDC
Terminal Block	4-pin 5.08 mm-spacing plug-in terminal block	
Rated Power Consumption		
Rated Power Consumption	2.5W (MAX)	
Physical Characteristics		
Housing	Metal, fanless	
Installation	DIN-Rail Mounting	
Dimensions(W×H×D)	30mm×115mm×91.5mm (excluding connectors, DIN rail)	
Weight	<0.3Kg	
Environmental Limits		
Applicable Environmental	Indoor	
Ambient Temperature	-40℃~+75℃	
Storage Temperature	-40℃~+85℃	
Ambient Relative Humidity	5%~95% (no condensing)	
MTBF		
MTBF	8378897h	
Warranty		
Warranty	Five years	

**Для дополнительной информации по нашей продукции, пожалуйста,
посетите наш сайт www.kyland.ru**
