

KIEN1008BA Industrial Ethernet Switch

Hardware Installation Manual

Publication Data: Dec. 2013

Version: V1.1

No.: 1.12.02.1053-0



KIEN1008BA Industrial Ethernet Switch

Hardware Installation Manual

Disclaimer: Kyland Technology Co., Ltd. tries to keep the content of this manual as accurate and as updated as possible. This document is not guaranteed to be error-free, and we reserve the right to amend it without notice to users.

All rights reserved.

No part of this documentation may be excerpted, reproduced, translated, annotated or duplicated, in any form or by any means without the prior written permission of KYLAND Corporation.

Copyright © 2013 Kyland Technology Co., Ltd.

Notice for Safety Operation

The product performs reliably as long as it is used according to the guidance. Artificial damage or destruction of the device should be avoided. Before using the device, read this notice carefully for personal and equipment safety. Please keep the manual for further reference. Kyland is not liable to any personal or equipment damage caused by violation of this notice.

- Do not place the device near water sources or damp areas. Keep the ambient relative humidity within the range from 5% to 95% (non-condensing).
- Do not place the device in an environment with high magnetic field, strong shock, or high temperature. Keep the working and storage temperatures within the allowed range.
- Install and place the device securely and firmly.
- Please keep the device clean; if necessary, wipe it with a soft cotton cloth.
- Do not place any irrelevant materials on the device or cables. Ensure adequate heat dissipation and tidy cable layout without knots.
- Wear antistatic gloves or take other protective measures when operating the device.
- Avoid any exposed metal wires because they may be oxidized or electrified.
- Install the device in accordance with related national and local regulations.
- Before power-on, make sure the power supply is within the allowed range of the device. High voltage may damage the device.
- Power connectors and other connectors should be firmly interconnected.
- Do not plug in or out the power supply with wet hands. When the device is powered on, do not touch the device or any parts with wet hands.
- Before operating a device connected to a power cable, remove all jewelry (such as rings, bracelets, watches, and necklaces) or any other metal objects, because they may cause electric shock or burns.

- Do not operate the device or connect or disconnect cables during an electrical storm.
- Use compatible connectors and cables. If you are not sure, contact our sales or technical support personnel for confirmation.
- Do not disassemble the device by yourself. When an anomaly occurs, contact our sales or technical support personnel.
- If any part is lost, contact our sales or technical support personnel to purchase the substitute. Do not purchase parts from other channels.
- Dispose of the device in accordance with relevant national provisions, preventing environmental pollution.

In the following cases, please immediately shut down your power supply and contact your Kyland representative:

- Water gets into the equipment.
- Equipment damage or shell damage.
- Equipment operation or performance has abnormally changed.
- The equipment emits odor, smoke or abnormal noise.

Contents

1 Product Overview.....	1
2 Structure and Interface.....	2
2.1 Front Panel.....	2
2.2 Top Panel.....	4
3 Mounting.....	5
3.1 Dimension Drawing.....	5
3.2 Mounting Modes and Steps.....	7
3.2.1 DIN-Rail Mounting.....	7
3.2.2 Panel Mounting.....	9
4 Connection.....	11
4.1 10/100Base-T(X) Ethernet Port.....	11
4.2 100Base-FX Ethernet Port.....	13
4.3 Grounding.....	14
4.4 Power Terminal Block.....	15
5 LEDs.....	18
6 Basic Features and Specifications.....	19

1 Product Overview

KIEN1008BA includes a series of green, intrinsically safe industrial Ethernet switches developed by Kyland with low power consumption. Equipped with high-performance switching engine, the series switches comply with intrinsically safe design.

KIEN1008BA has two forms: integrated device and bare board. An integrated device supports both DIN-rail mounting and panel mounting, while a bare board can be installed in another device. KIEN1008BA provides eight 100M cooper or fiber (optional) ports. For details, see the following table.

Table 1 KIEN1008BA Models

Model	Port		Remarks	Power Supply
	100Base-FX Ethernet port	10/100Base-T(X) Thernet port		
KIEN1008BA-EM-4S/M-4T	4	4	Bare board	3.3DCW, 12DC, 24DCW (redundant)
KIEN1008BA-EM-6S/M-2T	6	2		
KIEN1008BA-EM-8S/M	8	--		
KIEN1008BA-4S/M-4T	4	4	Integrated device	
KIEN1008BA-6S/M-2T	6	2		
KIEN1008BA-8S/M	8	--		



Note:

- If conformal coating is required, add “-C” before port description.
- We reserve the right to amend the product information listed in this table without notice. To obtain the latest information, contact our sales or technical support personnel.

2 Structure and Interface

**Caution:**

It is recommended to purchase the port dustproof shield (optional) to keep ports clean and ensure switch performance.

2.1 Front Panel

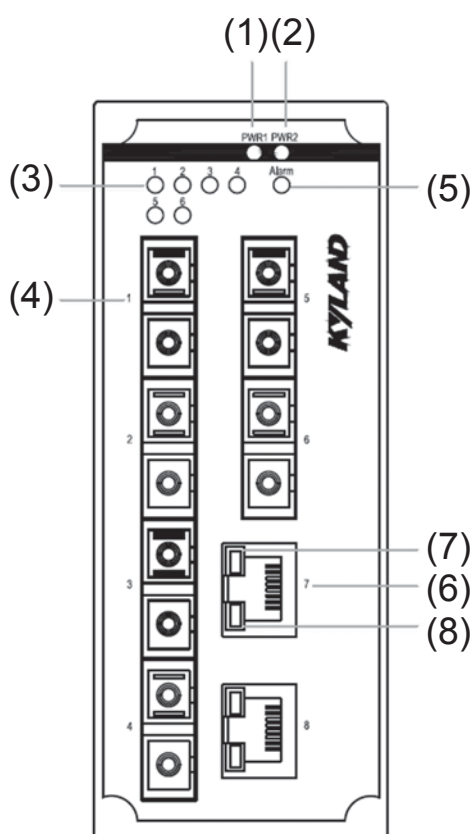


Figure 1 Front Panel of KIEN1008BA-6S/M-2T

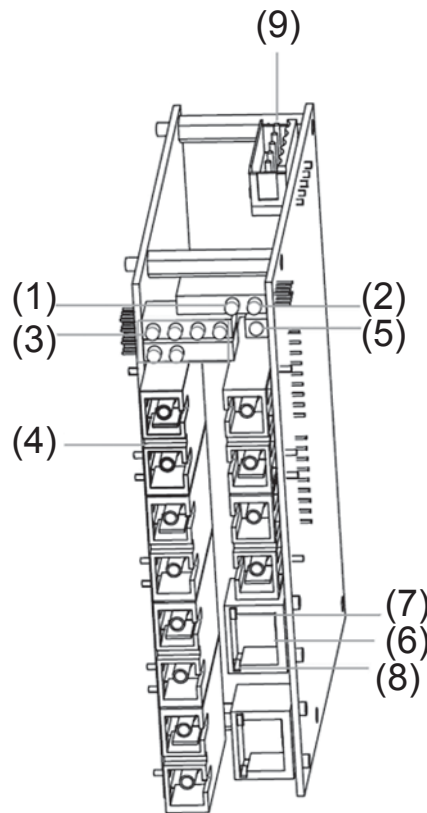


Figure 2 KIEN1008BA-EM-6S/M-2T (bare board)

Table 2 Description

No.	Description
(1)	Power 1 LED
(2)	Power 2 LED
(3)	Connection status LEDs for six 100Base-FX Ethernet ports
(4)	Six 100Base-FX Ethernet ports
(5)	Alarm LED
(6)	Two 10/100Base-T(X) Ethernet ports
(7)	10/100Base-T(X) Ethernet port connection status LED (green)
(8)	10/100Base-T(X) Ethernet port speed LED (yellow)
(9)	Power terminal block

2.2 Top Panel

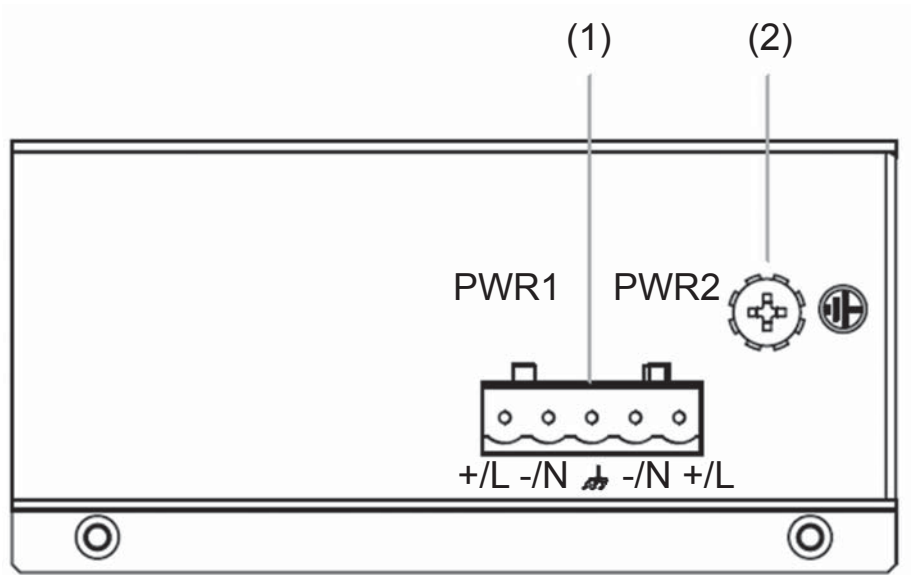



Figure 3 Top Panel

Table 3 Description of the Top Panel

No.	Identifier	Description
(1)	PWR1 +/L -/N  -/N +/L	Power terminal block
(2)	--	Grounding screw

3 Mounting

3.1 Dimension Drawing

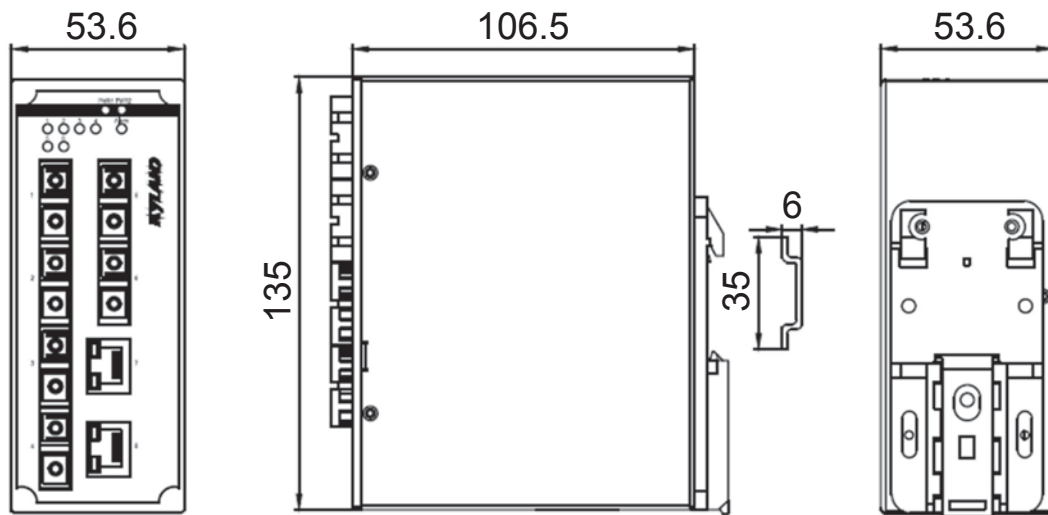


Figure 4 Dimensions for DIN-Rail Mounting (unit: mm)

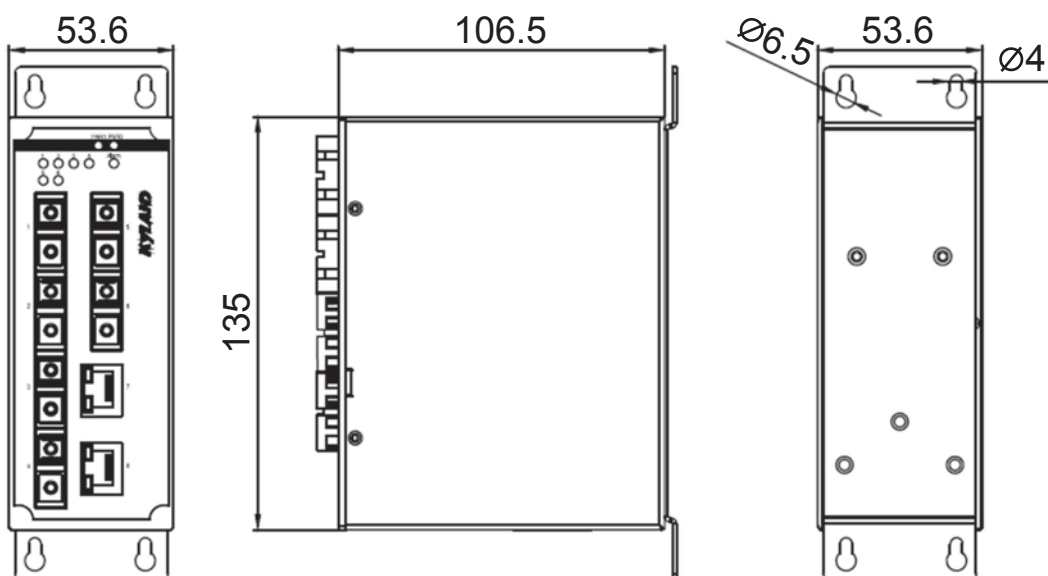


Figure 5 Dimensions for Panel Mounting (unit: mm)

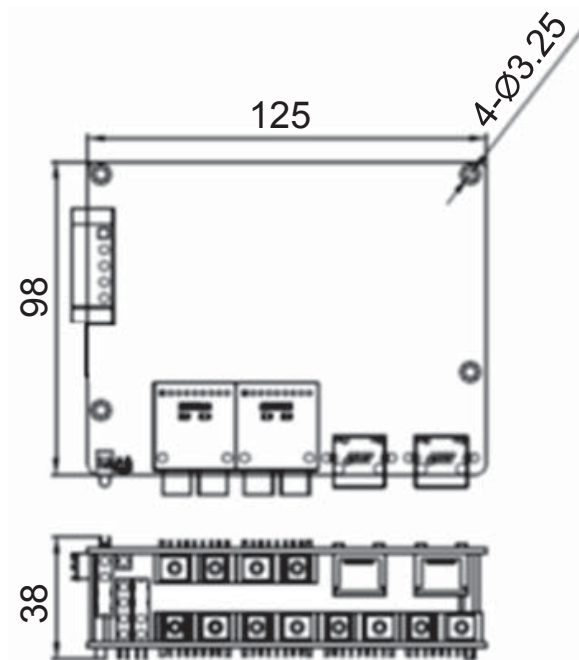


Figure 6 Dimensions of Bare Board (unit: mm)



Caution:

- As part of the heat dissipation system, the switch housing becomes hot during operation. Please use caution when coming in contact and avoid covering the switch housing when the switch is running.
- The figures in this manual are only for reference.
- The dimensions of other models are similar to those in the preceding figures.

3.2 Mounting Modes and Steps

The integrated device models support DIN-rail and panel mounting while bare board models can be embedded in other devices for integration. Before installation, make sure that the following requirements are met.

- 1) Environment: temperature (-40°C to 85°C), ambient relative humidity (5% to 95%, non-condensing)
- 2) Power requirement: The power input is within the voltage range of the switch.
- 3) Grounding resistance: $<5\Omega$
- 4) No direct sunlight, distant from heat source and areas with strong electromagnetic interference.

3.2.1 DIN-Rail Mounting

● Mounting

Step 1: Select the mounting position for the device and guarantee adequate space and heat dissipation (dimensions: $53.6\text{mm} \times 135\text{mm} \times 106.5\text{mm}$).

Step 2: Insert the connecting seat onto the top of the DIN rail, and push the bottom of the device inward and upward to ensure the DIN rail fits in the connecting seat. Make sure the device is firmly installed on the DIN rail, as shown in the following figure.

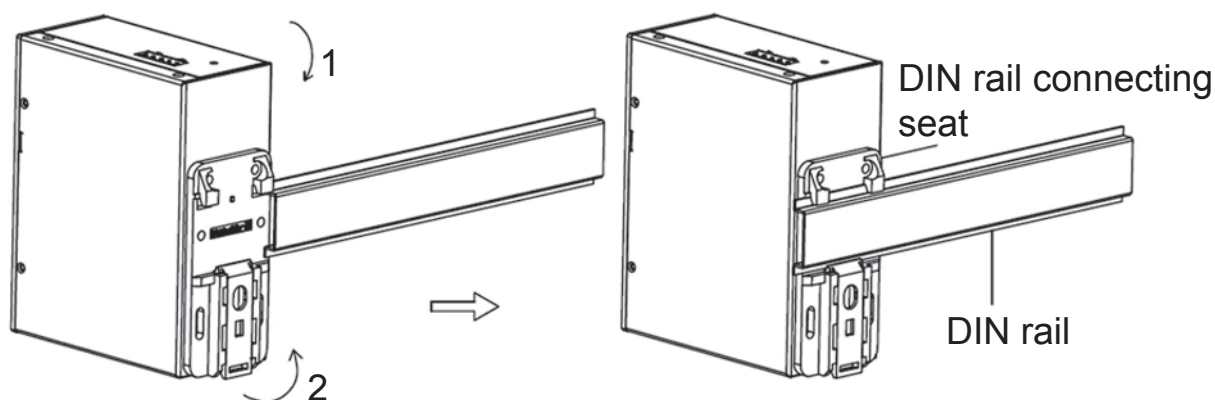


Figure 7 DIN-Rail Mounting

- Dismounting

Step 1: Insert the head of a screwdriver into the opening of the spring locking piece at the bottom from the left. Lift the handle of the screwdriver to open the spring locking piece of the connecting seat, as shown on the left of the following figure.

Step 2: Move the device in direction 2 until the bottom of the device is detached from the DIN rail. Then move the device in direction 3 and uplift the device until the top of the connecting seat is detached from the DIN rail.

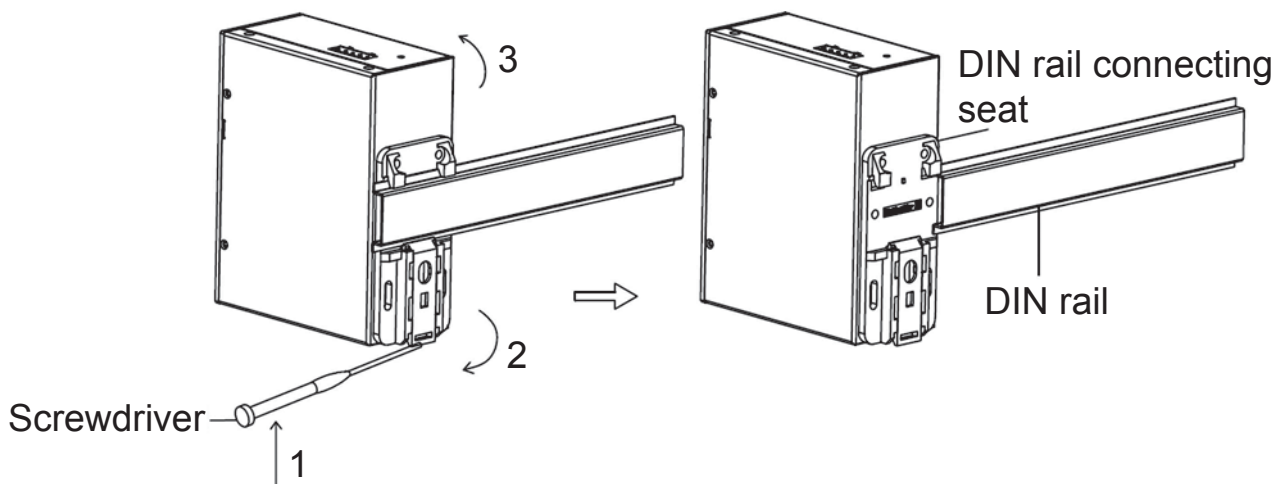


Figure 8 DIN Rail Dismounting

3.2.2 Panel Mounting



Note:

Purchase the plate (optional) for panel mounting.

● Panel Mounting

- Step 1: Use screws to secure the plate for panel mounting to the rear panel of the device.
- Step 2: Select the mounting position (on a wall or inner wall of a cabinet) for the device and guarantee adequate space and heat dissipation (dimensions: 53.6mm×135mm×106.5mm).
- Step 3: Punch four holes in the selected position according to the dimensions for panel mounting. Insert four screws into the four holes respectively, and turn the screws with a screwdriver until about a 5mm distance is left between each screw head and the wall.
- Step 4: Align the four mounting holes on the plate for panel mounting with the four screws. Make the screws pass through the $\Phi 6.5$ positions in the following figure. Move the device in direction 1 until the four screws are in the $\Phi 4$ positions. Then tighten the screws.

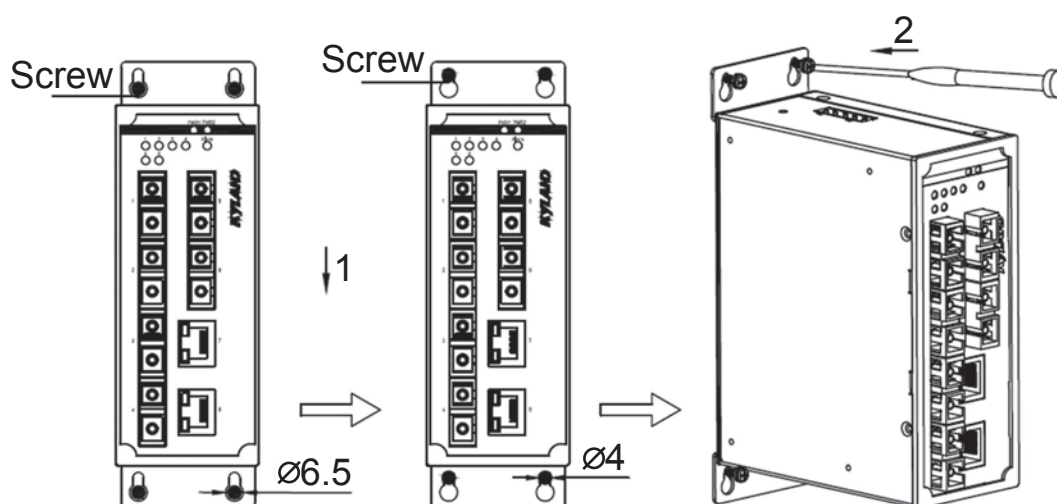


Figure 9 Panel Mounting

- Panel Dismounting

Step 1: Loosen the four screws with a screwdriver. Pull the device upward until the four screws are in the $\Phi 6.5$ positions in the following figure. Then remove the plate for panel mounting from the four screws to detach the device from the wall or inner wall of the cabinet.

Step 2: Loosen the screws completely with a screwdriver. Remove them from the wall or inner wall of the cabinet. Then remove the plate for panel mounting from the rear panel to complete dismounting the device.

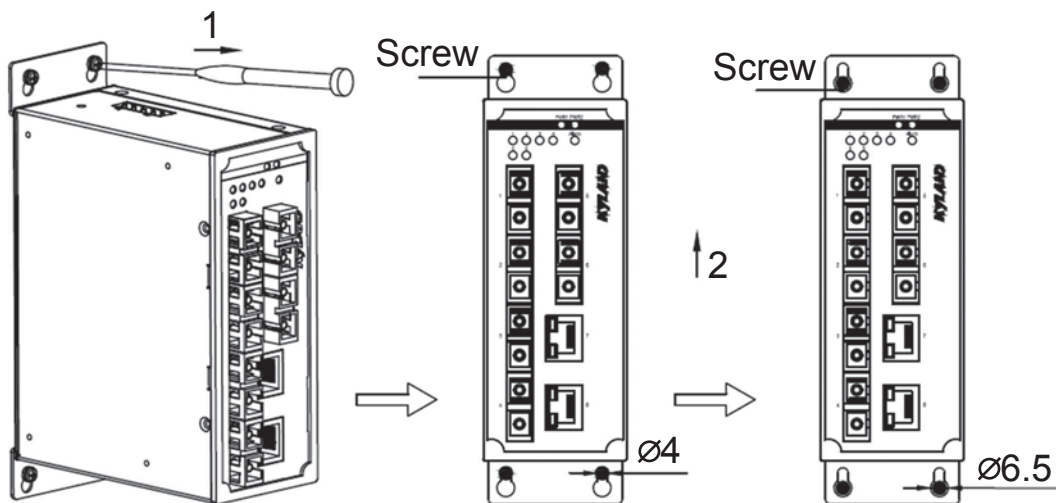


Figure 10 Panel Dismounting

4 Connection

4.1 10/100Base-T(X) Ethernet Port

10/100Base-T(X) Ethernet port is equipped with RJ45 connector. The port is self-adaptive. It can automatically configure itself to work in 10M or 100M state, full or half duplex mode. The port can also adapt to MDI or MDI-X connection automatically. You can connect the port to a terminal or network device with a straight-through or cross-over cable.

● Pin Definition

The following figure shows the pin numbers of the RJ45 port.

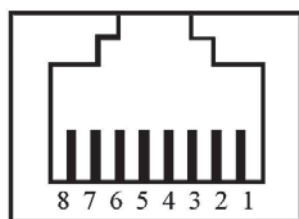



Figure 11 RJ45 Port

The following table lists the pin definitions of the 10/100Base-T(X) RJ45 port.

Table 4 Pin Definitions of 10/100Base-T(X) RJ45 Port

Pin	MDI-X Signal	MDI Signal
1	Receive Data+ (RD+)	Transmit Data+ (TD+)
2	Receive Data- (RD-)	Transmit Data- (TD-)
3	Transmit Data+ (TD+)	Receive Data+ (RD+)
6	Transmit Data- (TD-)	Receive Data- (RD-)
4, 5, 7, 8	Unused	Unused
 Note: "+" and "-" indicate level polarities.		

- Wiring Sequence

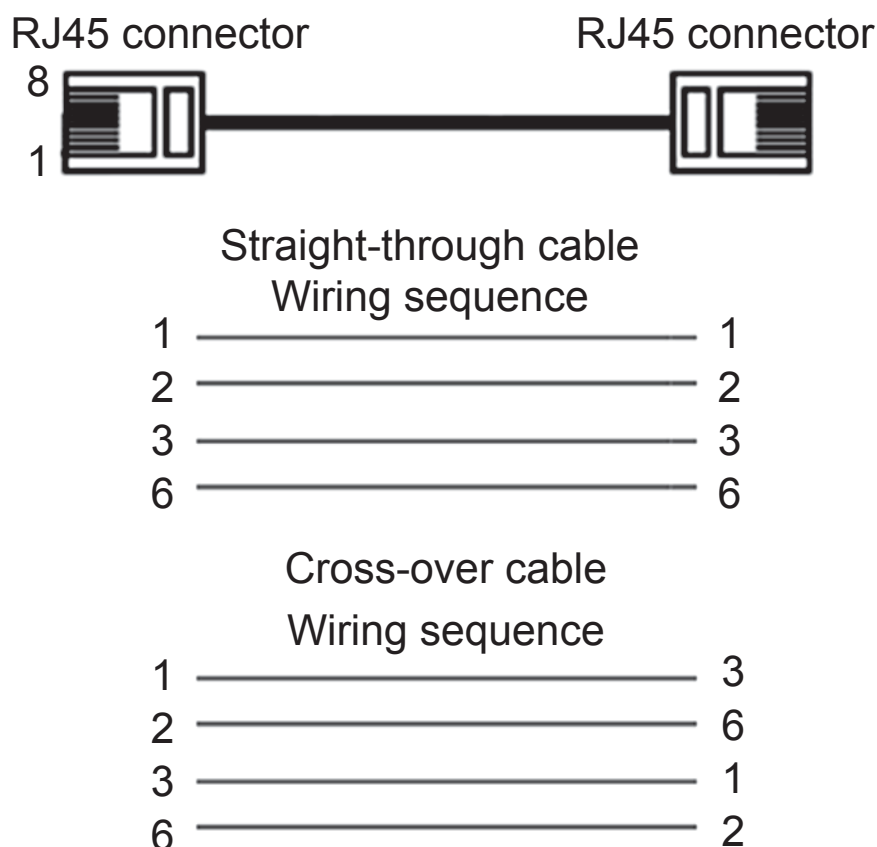


Figure 12 Connection Using Straight-through/Cross-over Cable



Note:

The color of the cable for RJ45 connector meets the 568B standard: 1-orange and white, 2-orange, 3-green and white, 4-blue, 5-blue and white, 6-green, 7-brown and white, and 8-brown.

4.2 100Base-FX Ethernet Port

100Base-FX Ethernet port is equipped with FC/ST/SC connector, and each port consists of TX (transmit) port and RX (receive) port. To enable data transmission between Device A and Device B, connect the TX port of Device A to the RX port of Device B, and the RX port of Device A to the TX port of Device B. The following uses an SC port as an example. The wiring sequence of an ST/FC port is the same with that of the SC port.

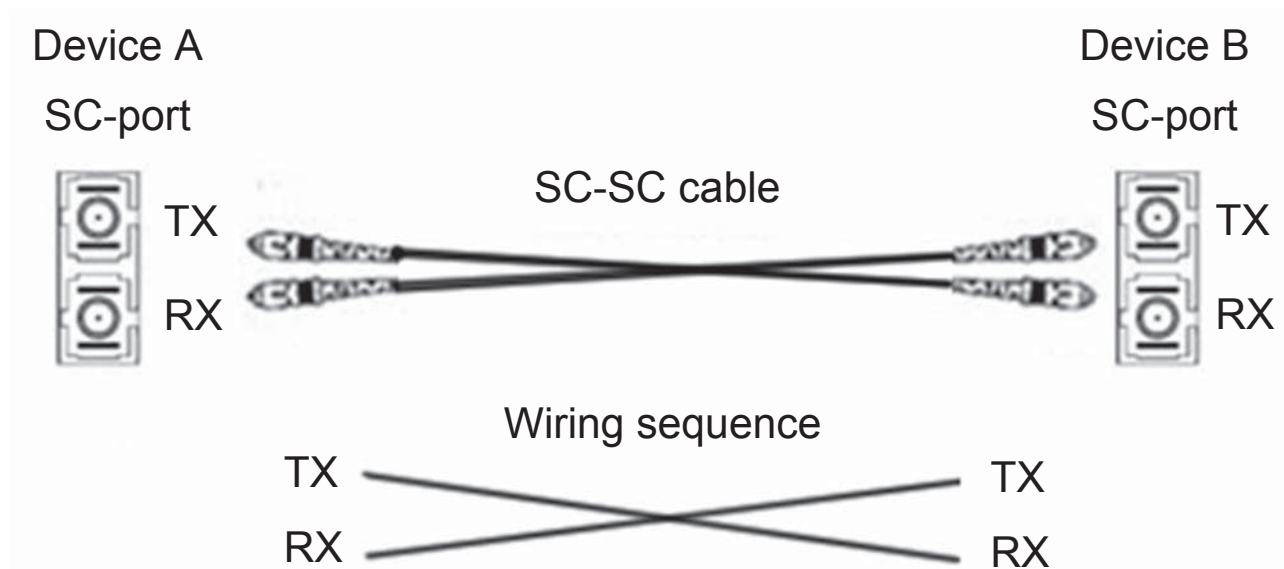


Figure 13 Connection of 100Base-FX Ethernet Port



Caution:

The device uses laser to transmit signals in fibers. The laser meets the requirements of level 1 laser products. Routine operation is not harmful to your eyes, but do not look directly at the fiber port when the device is powered on.

4.3 Grounding

Grounding protects the switch from lightning and interference. Therefore, you must ground the switch properly. You need to ground the switch before it is powered on and disconnect the grounding cable after the switch is powered off.

The switch provides a grounding screw on the top panel for chassis grounding. After crimping one end of the grounding cable to a cold pressed terminal, secure the end to the grounding screw and connect the other end to the earth firmly.

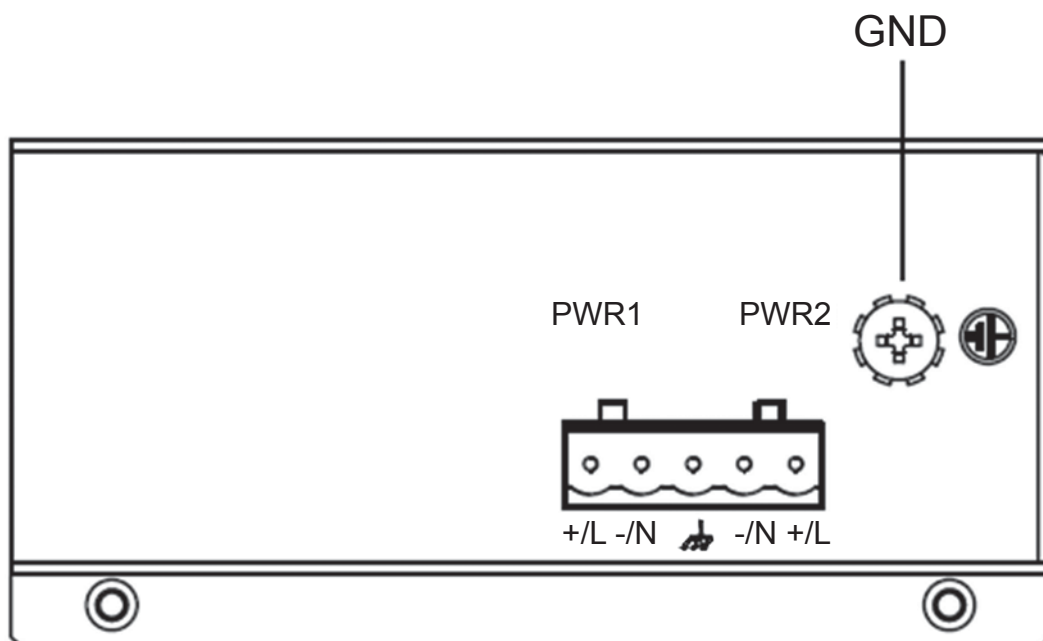


Figure 14 Grounding



Note:

Cross-sectional area of the chassis grounding cable $> 2.5 \text{ mm}^2$; grounding resistance $< 5 \Omega$.

4.4 Power Terminal Block

You need to connect the power wires to the terminal block to provide power to the device. The device supports single (PWR1) and redundant (PWR1 and PWR2) power supply with a 5-pin 5.08mm-spacing plug-in terminal block. When the redundant power supply is used and one power input is faulty, the device can continue operating properly, thereby improving network reliability.



Note:

$0.75\text{mm}^2 < \text{Cross-sectional area of the power wire} < 2.5\text{mm}^2$;
grounding resistance $< 5\Omega$.

● 5-Pin 5.08mm-Spacing Plug-in Terminal Block

The following figure shows the 5-pin 5.08mm-spacing plug-in terminal block.

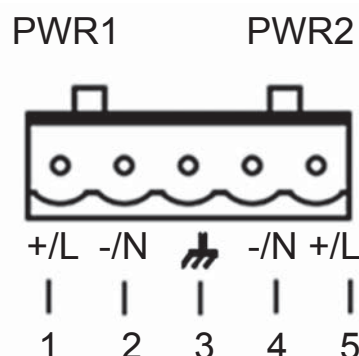



Figure 15 5-Pin 5.08mm-Spacing Plug-in Terminal Block (socket)

The following table lists the pin definitions of the 5-pin 5.08mm-spacing plug-in terminal block.

Table 5 Pin Definitions of 5-Pin 5.08mm-Spacing Plug-in Terminal Block

No.	Signal	DC Definition	AC Definition
1	+/L	PWR1: +	PWR1: L
2	-/N	PWR1: -	PWR1: N
3		PGND	PGND
4	-/N	PWR2: -	PWR2: N
5	+/L	PWR2: +	PWR2: L

● Wiring and Mounting

Step 1: Ground the device properly according to section 4.3.

Step 2: Remove the power terminal block from the device.

Step 3: Insert the power wires into the power terminal block according to Table 5 and secure the wires.

Step 4: Insert the terminal block with the connected wires into the terminal block socket on the device.

Step 5: Connect the other end of the power wires to the external power supply system according to the power supply requirements of the device. View the status of the power LEDs on the front panel. If the LEDs are on, the power is connected properly.

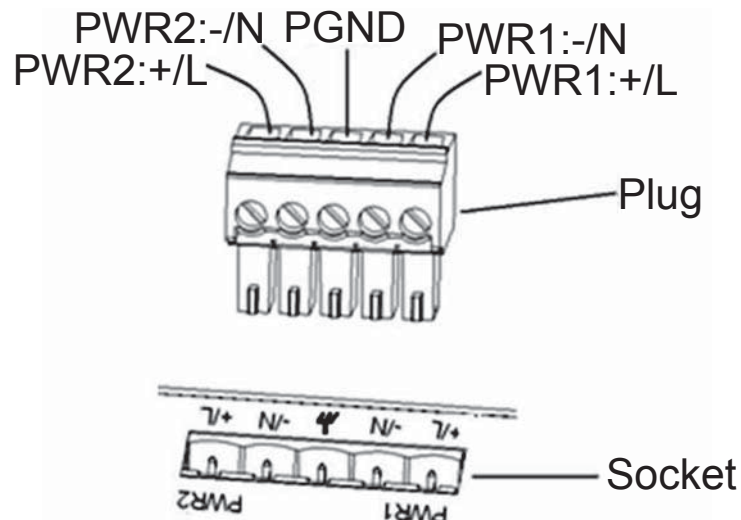


Figure 16 Connection of 5-Pin 5.08mm-Spacing Plug-in Terminal Block



Caution:

The switch supports 3.3DCW, 12DC and 24DCW power input (as listed in Table 1). Before connecting the device to power supply, make sure that the power input meets the power requirement. If connected to an incorrect power input, the device may be damaged.




Warning:

- Do not touch any exposed conducting wire, terminal, or component with a voltage warning sign, because it may cause damage to humans.
- Do not remove any part or plug in or out any connector when the device is powered on.

5 LEDs

Table 6 Front Panel LEDs

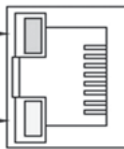LED	State	Description
Power 1 LED	On	Power 1 is connected and operates properly.
	Off	Power 1 is not connected or operates abnormally.
Power 2 LED	On	Power 2 is connected and operates properly.
	Off	Power 2 is not connected or operates abnormally.
Alarm LED	On	An alarm occurs.
	Off	No alarm occurs.
100Base-FX Ethernet port connection status LED	On	Effective port connection
	Blinking	Ongoing network activities
	Off	No effective port connection
<div> <div>Connection status (green)</div> <div>Speed (yellow)</div>  </div>		
10/100Base-T(X) Ethernet port speed LED (yellow)	On	100M working state (100Base-TX)
	Off	10M working state (10Base-T) or no connection
10/100Base-T(X) Ethernet port connection status LED (green)	On	Effective port connection
	Blinking	Ongoing network activities
	Off	No effective port connection

6 Basic Features and Specifications

Power Requirements

Power Identifier	Rated Voltage Range	Maximum Voltage Range
3.3DCW	3.3-5VDC	3-5.5VDC
12DC	12VDC	9-18VDC
24DCW	24-48VDC	18-72VDC
Terminal block	5-pin 5.08mm-spacing plug-in terminal block	

Rated Power Consumption

Rated power consumption	5.5W (MAX)
-------------------------	------------

Physical Characteristics

Housing	Metal, fanless
Installation	Integrated device: DIN-rail and panel mounting Bare board: embedded
Dimensions (W×H×D)	53.6mm×135mm×106.5mm(excluding connectors, DIN rail, and plate for panel mounting)
Weight	0.76Kg

Environmental Limits

Operating temperature	-40°C~+85°C
Storage temperature	-40°C~+85°C
Ambient relative humidity	5%~95% (non-condensing)

MTBF

MTBF	385,000hours
------	--------------

Warranty

Warranty	5 years
----------	---------



FAX: +86-10-88796678

Website: <http://www.kyland.com>

Email: support@kyland.com

For more information about KYLAND
products, please visit our website:
<http://www.kyland.com>